



Innovators of Freight Securement Systems®

INTERMODAL STRAP® REMOVAL TOOL

Assembly Notice: Threadlocked Handle - After assembling and tightening the handle, the tool may be used immediately. However, to ensure full locking performance of the pre-applied threadlocker, it is recommended **not to loosen or disassemble the handle within 48 hours after assembly.**



Locate the Removal tabs on each of the wings of the Intermodal Strap®/XL.



Slide the Removal Tool 1-1 ½ inches onto the removal tabs, slowly apply force until tape begins to peel & release.



Ease off pressure and fully slide the removal tool onto the Intermodal Strap®/XL. Slowly apply force until wings release.



Reposition the tool onto the opposite tabs. Slide the Removal Tool 1-1 ½ inches onto the removal tabs, slowly apply force until tape begins to peel & release.



Ease off pressure and fully slide the removal tool onto the Intermodal Strap®/XL. Slowly apply force to fully remove the Intermodal Strap®/XL.



Remove the Intermodal Strap®/XL from the removal tool and recycle.

High Install sequence: The removal process depends on the installation position of the Intermodal Strap®/XL. If the Intermodal Strap/XL is installed at a higher position, the removal sequence may be reversed.



Scan for more details