



LOGISTICK, INC

Innovators of Freight Securement Systems®



800-758-5840

 


Logistick.com


The complete INSTALLATION guide for Logistick's WEDGE SHIM, the perfect companion to our Wedge Systems, designed to fill the gaps caused by container wall variations to maximize securement performance.

For best results, please read through all instructions prior to installation.


- 1 Install Wedge Anchors:** Install both Wedge Anchors according to the standard product instructions. Ensure they are securely adhered and properly positioned before proceeding.

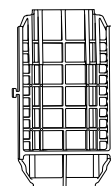

- 2 Position the Beam:** Insert one end of the beam into the pocket of the first Wedge Anchor. Rest the opposite end on the ramp of the second Wedge Anchor

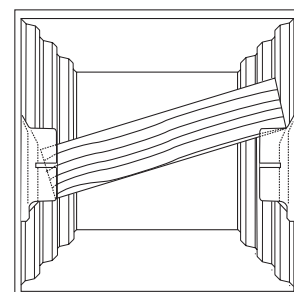


- 3 Place the Wedge Shim:** Position the Wedge Shim against the end of the lumber that is resting in the pocket.
 - Ensure the **lip edge of the shim sits above the end of the beam.**

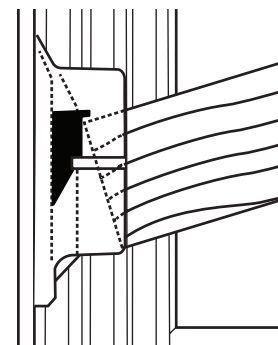

- 4 Secure the Beam and Shim:** While holding the Wedge Shim firmly in place:
 - Slide the beam and Shim under the retention clips inside the back of the anchor pocket.

- 5 Fully install the beam:** Push the opposite end of the beam off the ramp and fully into the second Wedge Anchor pocket. Confirm the beam is completely seated beneath the retention clips on both ends.

- 6 Add Additional Shimming (if needed):** If more outward pressure is required:
 - Place an additional shim at the opposite end of the installed system.
 - Using a rubber mallet only (do not use a metal hammer), gently tap the shim into place.

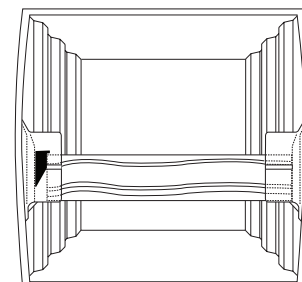



LOGISTICK, INC

Innovators of Freight Securement Systems®



800-758-5840




www.Logistick.com

The complete REMOVAL guide for Logistick's WEDGE SHIM, the perfect companion to our Wedge Systems, designed to fill the gaps caused by container wall variations to maximize securement performance.


Materials Needed:

- Prybar

1 Locate the Removal Channels: Using a prybar, insert the forks of the prybar into the removal channel of the Wedge Shim.

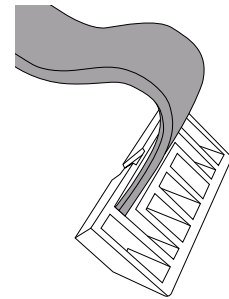

2 Remove the Wedge Shim: Apply steady pressure to pry the Wedge Shim loose. Continue to "walk" the Wedge Shim out of the pocket of the Wedge Anchor until it is completely removed.

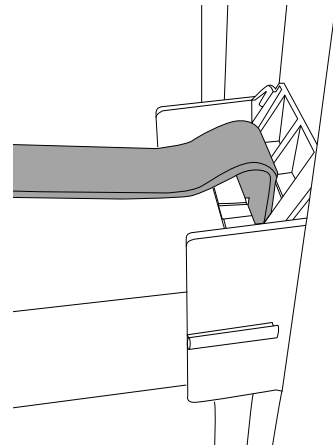

3 Remove the Beam and Wedge Anchors: Once the Wedge Shim has been removed, remove the Beam from the Wedge pocket. Remove the Wedge Anchor according to the product instructions.

Thank you for your business and continued partnership.

If you have any questions about this product or any of our other products please email us at sales@logistick.com



Innovators of Freight Securement Systems®

www.logistick.com

19880 State Line Road • South Bend, IN 46637-1545
1.800.758.5840 • 574.271.2565 • FAX 574.271.2574

Updated:07/12/25