

## 5 Installation:

1. Assemble LogiTrack by sliding the Pocket onto the Track and locking onto pegs. Remove the tape backing from ONE LogiTrack. In a level manner, adhere the LogiTrack onto the determined application area of one wall - **making sure that the handle is pointed DOWN TO THE FLOOR and is positioned so the 2x3 will be in contact with the freight.**



2. Remove tape backing from the second assembled LogiTrack. In a level manner, adhere onto the application area on the wall opposite the first LogiTrack, making sure it's in the same height and position, so the 2x3 will be in contact with the freight.

3. Insert the 2x3 into one installed LogiTrack. Slide off the Pocket from the opposite LogiTrack and place onto free end of the 2x3. While pulling the Pocket towards you, slide back onto the Track and lock onto pegs. An ample amount of force is needed to slide the second Pocket onto the Track because of the outward pressure of the system. **If the pressure is too great, remove half of ONE foam insert and try to re-install.** If the pressure is still too much, remove half of the foam insert from the opposite side and re-install. **Never remove all foam from the LogiTrack.**



4. When the entire system has been installed, be sure Pockets are locked onto Tracks. Press LogiTrack firmly against the wall to ensure tape surfaces are fully adhered.

6 **Filling the Void:** If necessary, use void filler between the beam and the freight to prevent the freight from starting to shift. Contact a Logistick representative for more details.



7 **Optional Installation for Security Seals (Sold Separately):** Locate holes on the Track of the LogiTrack. Run the loose seal wire through both holes and above the beam forming a complete loop, meeting at the body of the seal. Pull the loose wire through the body of the seal until it is tight and secure. Caution, once the wire has passed through the body of the seal, it's locked into place. Contact a Logistick representative for more details.



800-758-5840  
www.Logistick.com

# LOGISTICK, INC

Innovators of Freight Securement Systems®

**The complete REMOVAL GUIDE for Logistick's LOGITRACK® 2x3, the FIRST one-way multimodal load bar solution for securing light weight loads.**

**Watch the removal video at [www.logistick.com/videos](http://www.logistick.com/videos)**

### Materials Needed:

- Cloth (optional)
- Citrus Based Adhesive Remover (optional)
- Scraper (optional)
- Wire Cutters (optional)

1 **Removal of the 2x3:** If present, cut and remove Security Seals. Slide one Pocket up and remove from Track. Pull Pocket off the 2x3 and place back onto the Track. Completely remove 2x3 from LogiTrack system.



2 **Removal of the LogiTrack:** Remove foam inserts from both Pockets. Insert the 2x3 into one Pocket to use as a prybar. Pull 2x3 away from the freight using slow and steady pressure. Continue to pry and pull LogiTrack until entire Track has been removed. Repeat this process for opposite side.



3 **Removing Tape Remnants:** Use a cloth, and if needed, a scraper and a citrus based adhesive remover to clean any remaining tape residue from the trailer walls.



**IMPORTANT:** Staple a copy of the removal instructions to the 2x3 to assure safe, easy removal by consignee.

Thank you for your business and continued partnership.

If you have any questions about this product or any of our other products please email us at [sales@logistick.com](mailto:sales@logistick.com)



*Innovators of Freight Securement Systems®*

[www.logistick.com](http://www.logistick.com)

19880 State Line Road • South Bend, IN 46637-1545  
1.800.758.5840 • 574.271.2565 • FAX 574.271.2574



800-758-5840  
[www.logistick.com](http://www.logistick.com)

# LOGISTICK, INC

*Innovators of Freight Securement Systems®*

**The complete INSTALLATION GUIDE for Logistick's LOGITRACK® 2x3, the FIRST one-way multimodal load bar solution for securing light weight loads.**


**For best results, please read through all instructions prior to installation.**

**Watch the installation video at [www.logistick.com/videos](http://www.logistick.com/videos)**

### Materials Needed:

- |                      |                              |
|----------------------|------------------------------|
| • LogiTrack® 2x3     | • Scraper (optional)         |
| • 96 in. (8 ft.) 2x3 | • Rubbing Alcohol (optional) |
| • Dry Cloth          | • Security Seals (optional)  |

**1 LogiTrack® System:** The LogiTrack is a two part system, including a Pocket and a Track. The Track is adhered vertically with the handle pointed down. The Pocket locks into the Track horizontally to maximize the strength of the beam. The LogiTrack is designed to be used in trailers and containers with smooth or corrugated walls and can be applied on either the peak or valley of corrugation.

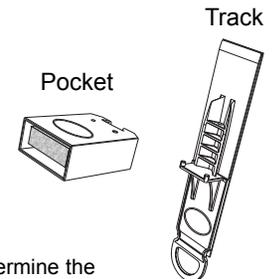

**2 Choosing the Application Area:** After loading the cargo, determine the best location for installation. Keep in mind that multiple sets of LogiTrack may be needed to safely secure your cargo. Choose an area that will place the LogiTrack at the same height and position, assuring the 2x3 will be installed parallel to the floor and against the freight. This will prevent the cargo from starting to shift.

**3 Prepping the Application Area:** The entire application area must be clean and dry to ensure proper installation. Use a dry cloth, and if needed, a scraper and rubbing alcohol to remove loose dirt, dust, condensation or frost from the application area.



**4 Preparing for Installation:** To ensure proper fit and pressure, always use a standard 96 inch (8 foot) 2x3. Each LogiTrack contains a perforated foam insert that is engineered to apply continuous pressure between the 2x3 and the walls of the trailer. **The LogiTrack is specifically designed for use in trailers or containers with an inside width of 99 to 102 inches.** If the inside width of the trailer is **less than 99 inches**, cut the 2x3 to 4 inches less than the inside width at application area.

**IMPORTANT: Once LogiTrack is installed, it cannot be repositioned.**