

LOGIRATCHET STRAP™

INSTALLATION INSTRUCTIONS



Adhere strapping anchors to the container wall at least 6 feet or 2 pallet rows BEFORE the end of the load. The handles, which are the anchor points must be directed toward the container door.



Attach one hook, facing inward, to the handle of your strapping anchor. Pull toward the handle end to lock the hook in place. Oriented correctly, the safety tag on the strap should be facing the trailer wall.



Using tape or a magnet, temporarily secure the piece of loose banding to the container wall so it will be out of the way and accessible after the freight is loaded.



Repeat the process on the other side, securing the ratchet to the trailer wall utilizing the integrated magnet.




After your freight is loaded, remove the ratchet and loose banding from the wall. Insert the loose banding through the mandrel and pull the slack out of the strap to make it tight.



Crank the ratchet to desired tension. Make sure the straps stay aligned to avoid tangling/locking. Lock the handle down after tensioning.

*note: multiple strapping systems may be needed to properly secure your freight.

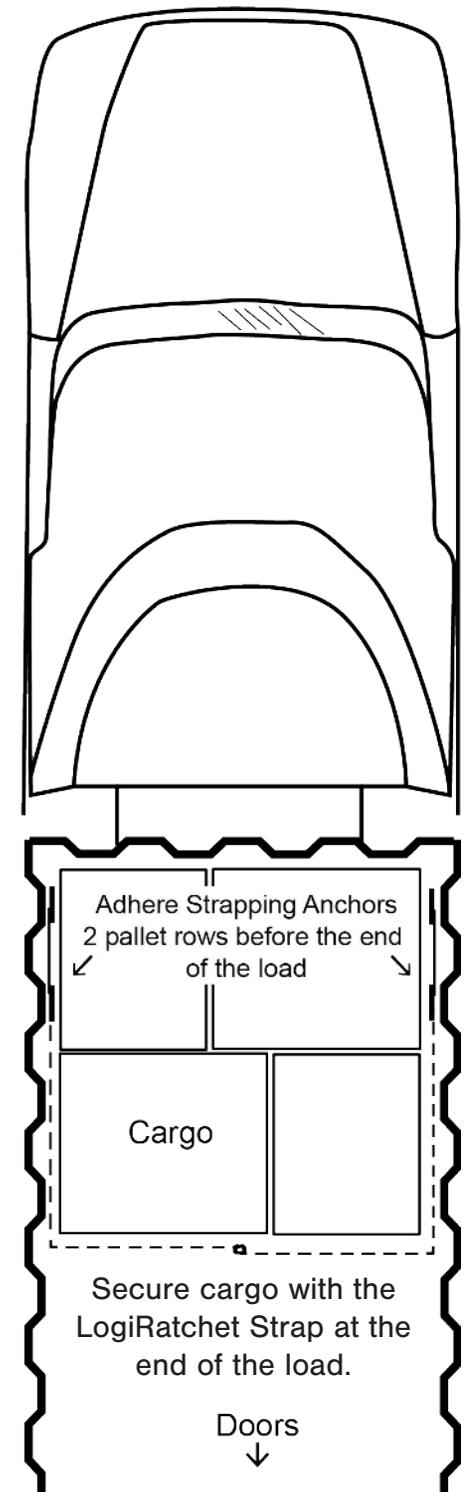

Scan QR Code to access videos and tips.



Innovators of Freight Securement Systems®

800-758-5840

www.logistick.com